

DRAGONWAR®



[HTTP://WWW.DRAGONWAR.JP](http://www.dragonwar.jp)



GKM-001 COMBO SET
USER MANUAL
PROFESSIONAL GAMING MOUSE



CONTENTS

PACKAGE CONTENTS / SYSTEM REQUIREMENTS	02
GAMING MOUSE LAYOUT	03
INSTALLING YOUR DRAGONWAR G7 MOUSE	04
CONFIGURING YOUR DRAGONWAR G7 MOUSE	05
ALTERNATE MOUSE BUTTON	06
BUTTON ASSIGNMENT MENU	07
SENSITIVITY OPTIONS	08
KEYBOARD FUNCTION KEYS SETTING	09

PACKAGE CONTENTS / SYSTEM REQUIREMENTS

PACKAGE CONTENTS

- Dragonwar Combo Set Gaming Mouse & Keyboard

SYSTEM REQUIREMENTS

- PC or Mac with a free USB 2.0 port
- Windows 8 / Windows 7 / Windows Vista / Window XP / Mac OS X


TECHNICAL SUPPORT

- 1 years limited warranty
- Free online technical support at www.dragonwar.jp

TECHNICAL SPECIFICATIONS

- Customizable ergonomics to fit all hand sizes
- 3200dpi blue sensor system
- Gold plated connector
- Braided USB cable


GAMING MOUSE LAYOUT

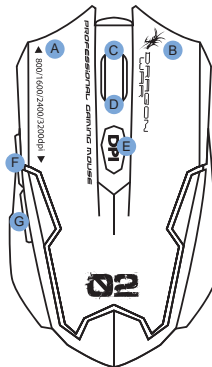

- A. Left Mouse Button
- B. Right Mouse Button
- C. Scroll Up
- D. Scroll Down
- E. Sensitivity Stage Change

- F. Forward
- G. Backward

INSTALLING YOUR DRAGONWAR COMBO SET

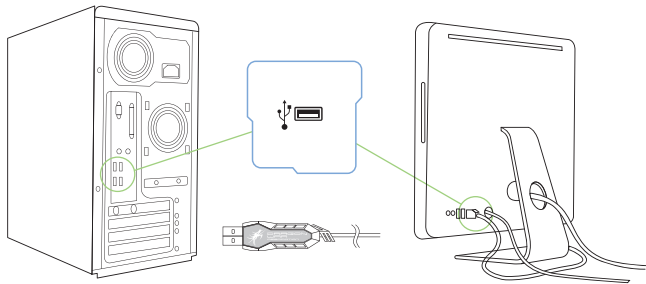

- Step 1: Plug the Dragonwar GKM-001 into the USB port of your computer.
- Step 2: Run the installer and follow the Programme.
- Step 3: Wait until the software automatically downloads and installs.
- Step 4: Open the programme, then set up

CONFIGURING YOUR DRAGONWAR GKM-001

MOUSE TAB

The Mouse Tab is your default tab when you first install Programme. This tab allows you to customize your device's profiles, button assignments, performance and lighting.



ALTERNATE MOUSE BUTTON

Initially, each of the mouse buttons is set to DEFAULT.

Which you can choose from the Assign Button submenu

- | | |
|----------------|------------------|
| 1 Play/Pause | 5 Volume - |
| 2 Pre Track | 6 Volume + |
| 3 Media Player | 7 Next Track |
| 4 Stop | 8 Switch Key |
| | 9 DPI Repetition |



BUTTON ASSIGNMENT MENU

Each of the mouse buttons is set to DEFAULT. However, you may change the function of these buttons by clicking the desired button to access the BUTTON ASSIGNMENT Menu.



SENSITIVITY OPTIONS

Sensitivity pertains to how much effort is needed to move the mouse pointer in any direction. The higher the sensitivity, the more responsive the mouse will be.

1. Select the number of sensitivity stage needed.
2. Click on the stage you would like to preset and adjust using the arrow on the slider below.
3. Click "Apply" when done. To switch between different sensitivity stages, simply assign the Sensitivity Stage Up and Sensitivity Stage Down functions to the desired buttons.



FN Combination function

FN+F1= Player	FN+F9= Email
FN+F2= VOLFN+	FN+F10= Homepage
F3= VOL+	FN+F11= Lock
FN+F4= Mute	FN+F12= Calculator
FN+F5= Stop	FN+Q = Speed up
FN+F6= Previous	FN+W = W S A D and ↑↓←→ can be interchanged.
FN+F7= Play/Pause	FN+ "WIN-L"= Lock WIN
FN+F8= Next	FN+LED = Open/close breathing light